
patient commission/configuration ID _____



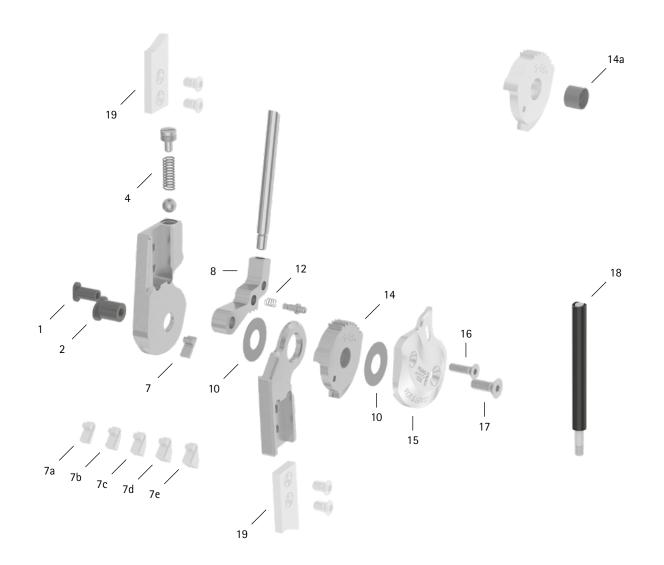

ltem	16mm	Description	Potential Problem	Measure	Recommended Inspection, Potential Replacement*	Latest Replacement after				
System Joint										
1	SB6049-L1130	bearing nut (locking pawl)	wear	replacing	every 6 months	36 months				
2	SB9669-L1130	bearing nut (joint axis)								
4	FE1527-01	pressure spring	wear	replacing	every 6 months	18 months				
7	SK9803-E005	5° extension stop	wear	replacing	every 6 months	if required				
7a	SK9803-E010	10° extension stop								
7b	SK9803-E015	15° extension stop								
7c	SK9803-E020	20° extension stop								
7d	SK9803-E025	25° extension stop								
7e	SK9803-E030	30° extension stop								



patient commission/configuration ID _____

Item	16mm	Description	Potential Problem	Measure	Recommended Inspection, Potential Replacement*	Latest Replacement after
8	SK0763-L/025		wear of the detents	replacing	every 6 months	18 months***
8	SK0763-L/038	sten lock nawl**				
8	SK0763-L/050					
8	SK0763-L/063					
8	SK0763-L/075					
8	SK0763-L/088					
8	SK0763-L/100					
10	GS2210-040	sliding washer, Ø = 22mm wear	wear	replacing	every 6 months	18 months
10	GS2210-045					
10	GS2210-050					
10	GS2210-055					
10	GS2210-060					
12	FE1411-02	pressure spring	wear	replacing	every 6 months	18 months
14	SK0793-2L/TI	5° step lock stop disc with sliding bushing, 5°–55°, in 10° steps, left lateral or right medial, titanium	wear of the detents	replacing	every 6 months	18 months***
14	SK0793-2R/TI	5° step lock stop disc with sliding bushing, 5°–55°, in 10° steps, left medial or right lateral, titanium				
14a	BP1110-L078	sliding bushing	wear	replacing	every 6 months	18 months
15	SK0763-2L/AL	cover plate, left lateral or right medial, aluminium	wear	replacing	every 6 months	36 months
15	SK0763-2R/AL	cover plate, left medial or right lateral, aluminium				
16	SC1404-L14	countersunk flat head screw with hexalobular socket		replacing	every 6 months	36 months
17	SC1405-L14	countersunk flat head screw with hexalobular socket (axle screw)	wear			
Pullin	g Cable (If Existir	ng). You need one pulling cable adaptor for each locking pawl to	mount a pulling cal	ole on.		
18	ZS1000-L400	pulling cable, nylon cable with cover, 400mm	wear	replacing	every 6 months	36 months
18	ZS1000-L500	pulling cable, nylon cable with cover, 500mm				
18	ZS1000-L600	pulling cable, nylon cable with cover, 600mm				
18	ZS1000-L700	pulling cable, nylon cable with cover, 700mm				
18	ZS1100-L400	pulling cable, separable through coupler, 400mm				
18	ZS1100-L500	pulling cable, separable through coupler, 500mm				
Syster	m Anchors and Sy	/stem Side Bars				
19	see catalogue	system anchor and system side bar	wear or breakage	replacing	every 6 months	if required

* depending on the assessment of the distributor of the custom-made product regarding the patient's usage behaviour

** If you need a step lock pawl for right lateral or left medial as opposed to a step lock pawl for left lateral or right medial listed here, you have to replace the L in the article number with an R. Example: SK0763-R/025.

*** The step lock pawl and step lock stop disc are subject to faster wear. This may result in shorter maintenance intervals.