
patient commission/configuration ID _____





| ltem | 14mm | Description | Potential Problem | Measure | Recommended Inspection, Potential Replacement* | Latest Replacement after | | | |
|--------------|--------------|----------------------------|-------------------|-----------|---|--------------------------------|--|--|--|
| System Joint | | | | | | | | | |
| 1 | SB6044-L0610 | bearing nut (locking pawl) | wear | replacing | every 6 months | 36 months | | | |
| 2 | SB8554-L0610 | bearing nut (joint axis) | | | | | | | |
| 4 | FE1414-02 | pressure spring | wear | replacing | every 6 months | 18 months | | | |
| 7 | SK9602-E005 | 5° extension stop | wear | replacing | every 6 months | 18 months | | | |
| 7a | SK9602-E010 | 10° extension stop | | | | | | | |
| 7b | SK9602-E020 | 20° extension stop | | | | | | | |
| 7c | SK9602-E030 | 30° extension stop | | | | | | | |

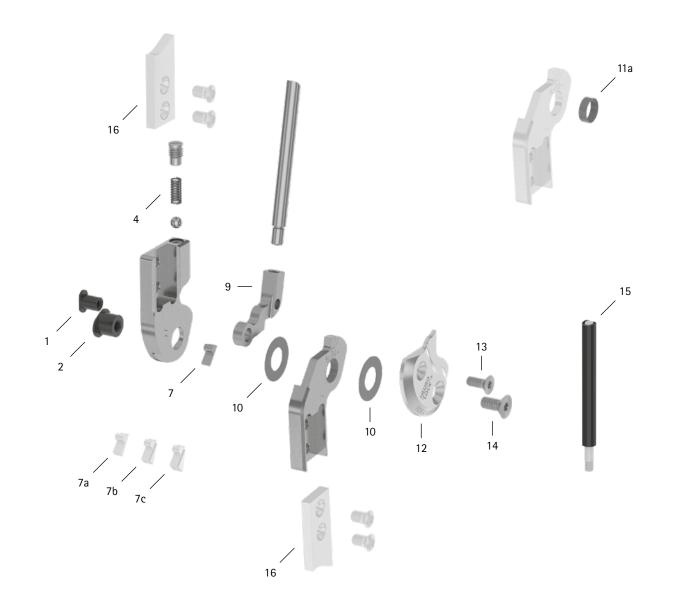

FIOR & GENTZ

patient commission/configuration ID _____

*

| ltem | 14mm | Description | Potential Problem | Measure | Recommended Inspection, Potential Replacement* | Latest Replacement after |
|--------|---------------------|--|---------------------|-----------|---|--------------------------------|
| 9 | SK0472-TI050 | locking pawl | wear | replacing | every 6 months | 36 months |
| 9 | SK0472-TI063 | | | | | |
| 10 | GS1609-040 | sliding washer, Ø = 16mm | wear | replacing | every 6 months | 18 months |
| 10 | GS1609-045 | | | | | |
| 10 | GS1609-050 | | | | | |
| 10 | GS1609-055 | | | | | |
| 10 | GS1609-060 | | | | | |
| 11a | BP1009-L029 | sliding bushing | wear | replacing | every 6 months | 18 months |
| 12 | SK0452-2L/AL | cover plate, left lateral or right medial, aluminium | wear | replacing | every 6 months | 36 months |
| 12 | SK0452-2R/AL | cover plate, left medial or right lateral, aluminium | | | | |
| 13 | SC1404-L10 | countersunk flat head screw with hexalobular socket | wear | replacing | every 6 months | 36 months |
| 14 | SC1405-L10 | countersunk flat head screw with hexalobular socket (axle screw) | | | | |
| Pullin | g Cable (If Existin | g). You need one pulling cable adaptor for each locking pawl to | mount a pulling cat | ole on. | | |
| 15 | ZS1000-L400 | pulling cable, nylon cable with cover, 400mm | wear | replacing | every 6 months | 36 months |
| 15 | ZS1000-L500 | pulling cable, nylon cable with cover, 500mm | | | | |
| 15 | ZS1000-L600 | pulling cable, nylon cable with cover, 600mm | | | | |
| 15 | ZS1000-L700 | pulling cable, nylon cable with cover, 700mm | | | | |
| 15 | ZS1100-L400 | pulling cable, separable through coupler, 400mm | | | | |
| 15 | ZS1100-L500 | pulling cable, separable through coupler, 500mm | | | | |
| System | m Anchors and Sy | stem Side Bars | | | | |
| 16 | see catalogue | system anchor and system side bar | wear or breakage | replacing | every 6 months | if required |

depending on the assessment of the distributor of the custom-made product regarding the patient's usage behaviour