
patient commission/configuration ID \_\_\_\_\_



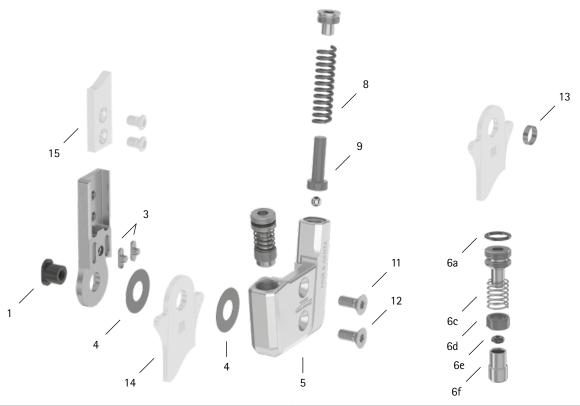

Item	10mm	Description	Potential Problem	Measure	Recommended Inspection, Potential Replacement*	Latest Replacement after
Syste	m Joint					
1	SB6039-L0580	bearing nut	wear	replacing	every 6 months	36 months
3	SF0390-01	feather key with pin	breakage	replacing	every 6 months	36 months
4	GS1206-040	sliding washer, Ø = 12mm	wear	replacing	every 6 months	18 months
4	GS1206-045					
4	GS1206-050					
4	GS1206-055					
4	GS1206-060					
5	SF0860-L/AL	cover plate, left lateral or right medial**	wear	replacing	every 6 months	36 months
5	SF0860-R/AL	cover plate, left medial or right lateral**				
6a	VE3771-04/10	O-ring for securing the alignment screw**	wear	replacing	every 6 months	18 months
6c	FE1615-01	pressure spring**	wear	replacing	every 6 months	18 months
6d	GS0604-350	sliding bushing**	wear	replacing	every 6 months	18 months
6e	PN0003-L02	stop damper**	wear	replacing	every 6 months	18 months
6f	SH0490-01	plunger**	wear	replacing	every 6 months	36 months
8	FE1622-01	pressure spring, golden**	wear	replacing	every 6 months	18 months
9	SF0840-07	pin**	wear	replacing	every 6 months	36 months
11	SC1403-L08	countersunk flat head screw with hexalobular socket**	wear	replacing	every 6 months	36 months
12	SC1403-L08	countersunk flat head screw with hexalobular socket (axle screw)**				
5-12	SF8970-L/AL	functional unit plug + go modularity, left lateral or right medial***	loss of function, wear	replacing	every 6 months	36 months
5-12	SF8970-R/AL	functional unit plug + go modularity, left medial or right lateral***				
Syste	m Stirrups, Syste	m Anchors and System Side Bars				
13	BP0706-L020	sliding bushing	wear	replacing	every 6 months	18 months
14	see catalogue	system stirrup	wear or breakage	replacing	every 6 months	48 months
15	see catalogue	system anchor and system side bar	wear or breakage	replacing	every 6 months	if required

<sup>\*</sup> depending on the assessment of the distributor of the custom-made product regarding the patient's usage behaviour

<sup>\*\*</sup> is part of the functional unit

<sup>\*\*\*</sup> included system components can be exchanged separately